

Mace Brand Portable Alarm

INTRODUCTION

The Mace Brand Portable Alarm provides valuable protection for you and your belongings. The alarm may be temporarily installed on a door, carried as a personal alarm or taken with you when you travel.

FEATURES

- Cable lock with vibration sensor.
- Convenient size—easy to carry or pack in your luggage.
- Powerful 100 dB alarm.
- Alarm sounds when the loop cable is detached or cut.
- PANIC button for instant alarm trigger.
- Battery removal while armed triggers an instant alarm.
- When activated, the alarm will sound for 30 seconds before resetting.
- Battery low indicator.

CONSTRUCTION

1. PANIC Button
2. Password Key
3. Vibration Sensor ON/OFF Switch
4. Power and Function LED
5. Loop Cable
6. Battery Door

INSTALLATION

Before using your Mace Brand Portable Alarm, the three supplied button cell batteries (LR44 or equivalent) must be installed. To install the batteries, follow these simple steps:

- With a small Phillips screwdriver, remove the screw which secures the battery cover. Set the battery cover and screw aside.
- Install the three batteries as illustrated in FIG. 1. Please note the polarity markings (+/-) inside of the case.
- After the batteries have been installed, the alarm will sound two short "beep" tones and the front red LED will flash for 1.2 seconds.
- Reattach the battery cover and secure the screw with the Phillips screwdriver. Do not over tighten the screw.

Your unit is now ready to protect you and your belongings.

OPERATIONS

Immediately after you have completed the battery installation process, you should change the default password of the alarm.

To set a new password for the alarm, follow this simple procedure:

- Ensure that the alarm is not in the ARMED mode.
- Press the red "P" key once and quickly enter the default password of "1234".
- The alarm will sound two short "beep" tones and the red LED will flash five times over 10 seconds.
- During the LED flashing period, a new four digit password should be entered. The password must be four digits in length.
- After your new password has been accepted, the alarm will sound three short "beep" tones to indicate that your new password has been accepted. Remember to keep your password in a secure place.

Note: If you forget your password, please remove the batteries and wait for two minutes. After reinstalling the batteries, the password will be reset to the factory default of "1234". Please refer to the OPERATIONS section to reset your password.

ARMING & DISARMING, VIBRATION MODE DISABLED

In the non-vibration mode, the device will not detect movement. The alarm may be activated by pulling on the loop cable, cutting the loop cable or by pressing and holding the PANIC button for two seconds. The typical use for the alarm in this case is to secure a bicycle or to protect a locker or box from being opened.

To install the alarm, ensure that the keypad is facing forward, unscrew the left loop cable fitting from the top of the unit (FIG. 2). The loose cable should now be secured to the item to be protected. The previously unscrewed cable fitting should now be reattached to the alarm.

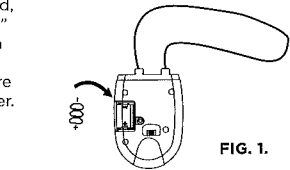
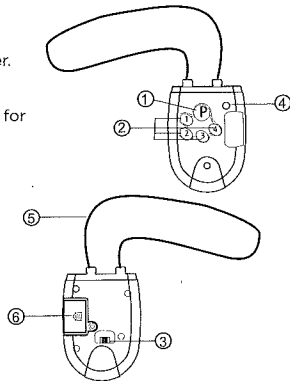


FIG. 1.

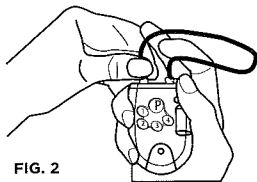



FIG. 2

- To arm the alarm, quickly depress the "P" key twice. The alarm will sound three short "beep" tones and the red LED will flash at the same time. After five seconds the alarm will enter the ARMED mode.
- To disarm the alarm before activation, press the "P" key once and key in your password. The alarm will sound one long "beep" tone to indicate the alarm is disarmed.
- To disarm the alarm when it is sounding, make certain that the fixed end of the loop (marked pull) is pushed all the way in and input the four digit password. The alarm will sound a long "beep" tone to acknowledge that it has been disarmed.
- While armed, if you enter the wrong password, the device will sound one long "beep" tone instantly. If you enter an incorrect password three times within 10 seconds, the alarm will sound for 30 seconds.

ARMING & DISARMING, VIBRATION MODE ENABLED

When the vibration mode is enabled, in addition to activating the alarm by pulling on the loop cable, cutting the loop cable or by depressing the PANIC button for two seconds, the alarm will detect direct contact motion and vibration. The typical use for the alarm in this case is to protect an entry or exit door. The alarm should be hung on the door knob and armed (FIG 3.)

FIG. 3.

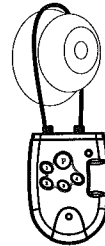

- Before activating the alarm, move the vibration switch located on the rear of the unit from "OFF" to "ON". When the vibration switch is set to the "ON" position, the alarm will detect movement and vibration. When movement or vibration is detected, the alarm will sound a one second warning tone. After this initial warning tone, the alarm will pause for two seconds to allow for the entry of the password to disable the alarm. The alarm will continue to sense for movement or vibration and if detected, will go into alarm mode. The alarm will sound for 30 seconds. To disable the alarm during the sounding mode, enter the four digit password.
- To arm the device, quickly press the "P" key twice. The unit will sound three short "beep" tones and the red LED will flash at the same time. After five seconds the alarm will enter the ARMED mode.
- To disarm the alarm before activation, press the "P" key once and enter your password. The unit will sound one long "beep" tone to indicate the device is disarmed.
- To disarm the alarm when it is sounding, make certain that the fixed end of the loop (marked pull) is pushed all the way in and input the four digit password. The alarm will sound a long "beep" tone to acknowledge that it has been disarmed.
- While armed, if you enter the wrong password, the alarm will sound one long "beep" tone instantly. If you enter an incorrect password three times within 10 seconds, the alarm will sound for 30 seconds.

Additional Notes:

While in the ARMED mode, the alarm will sound a short tone every 10 seconds to indicate a low battery condition. The three batteries (LR44 or equivalent) should be replaced immediately to ensure continued protection. This alarm provides valuable protection for you and your belongings. We cannot guarantee complete protection against any losses. Always be aware of your surroundings and exercise care over your person and your belongings.

LIMITED WARRANTY

Mace Personal Defense & Security, Inc. warrants that this device shall be free from defects in materials and workmanship and shall perform under normal use for a period of 90 days from the date of purchase. Any implied warranties, including those of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE, are also limited to 90 days from the date of purchase. In the event a failure occurs due to materials or workmanship, Mace will repair or replace the defective device. The complete unit, including a description of the defect, should be returned to Mace at the address below. This warranty does not apply if the device has been subjected to misuse or abuse. The seller undertakes no responsibility for the quality of the goods except as otherwise provided in this contract, and the seller assumes no responsibility that the goods will be fit for any particular purpose for which you may be buying these goods, except as otherwise provided in the contract. Under no circumstance shall Mace be responsible for incidental or consequential damages with respect to economic loss or injury to person or property, whether as a result of breach of express or implied warranty, negligence, or otherwise. Mace will not be responsible for the result of careless handling or unreasonable use. This warranty gives you specific rights, and you may have other rights which vary from state to state. Some states do not allow time limitations on an implied warranty, or the exclusion or limitation of incidental or consequential damage, so the above exclusions may not apply to you. Manufactured for Mace Personal Defense & Security, Inc. 4400 Carnegie Avenue, Cleveland, OH 44103 USA • (800) 255-2634 • www.mace.com