

MotoFizz THERMO CLOCK

OPERATING INSTRUCTIONS

Before using your MotoFizz Thermo Clock, you'll need to install the battery (included). Take a very small screwdriver and loosen the three screws marked with arrows on the backplate. Insert battery, backplate and tighten screws. All settings and adjustments are done with the three buttons found on the front of the clock: Adjust (A), Select (B), and Mode (C).

SET TIME: Press C three times. Seconds will flash. Press A to zero out seconds. Press B to make minutes flash. Adjust with A. Press B to make hour flash. Adjust with A. Press B to set date/day. Press C to return to normal mode.


SET DATE/DAY: Press C three times, then B three times. Day will flash. Adjust with A. Press B to make date flash. Adjust with A. Press C to return to normal mode.

SET ALARM: Press C twice to make alarm hour flash. Adjust with A. Press B to make minutes flash. Adjust with A. Pressing A and B at the same time turns alarm on/off (note alarm icon in top right corner). Alarm will sound for 60 seconds if A and B are not pressed.

SET CHIME: Your Thermo Clock can be set to "chime" on every hour. Pressing B and C at the same time turns the chime on/off (note the bell icon in the top right corner).

STOPWATCH: Press C once. Press A to turn stopwatch on/off. Press B to zero out. Press C to return to normal mode.

BACKLIGHT: Press any button to turn backlight on. Illumination will last about 4 seconds.

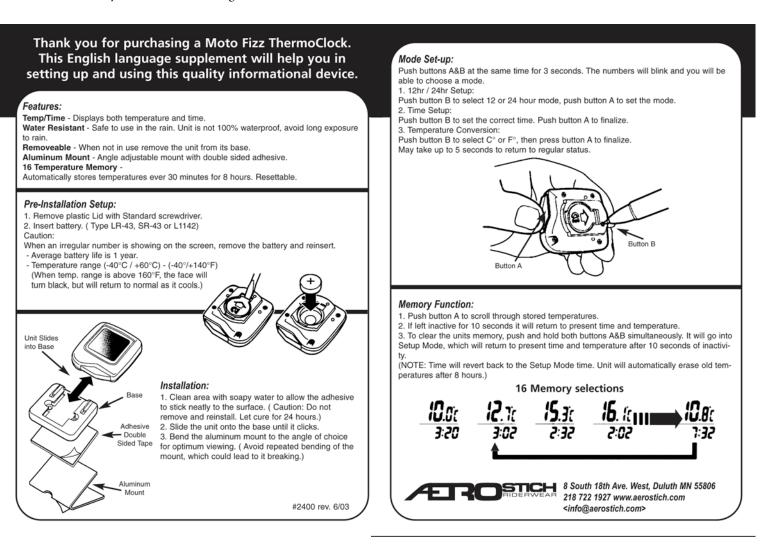

#4222 Rev 03/10 ©2008 Aero Design & Mfg. Co., Inc.