 


## Panic Function


When you push the "Panic" button you'll hear the alarm for 7 seconds.  
 • This setting will work only when the alarm is "on".  
 • If you push "Panic" when the Antitheft Motion Sensor is activated, the motion sensor activation will be canceled. When you push "on" button, the motion sensor will be re-activated.

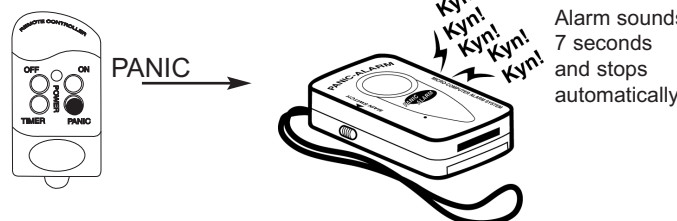

## LED Battery Lamp

When batteries are full, you won't see the LED light, but when the batteries are low, the light will turn on.


- A.** No Light: good working condition
- B.** Light: time to change the batteries
- C.** No Light: dead batteries

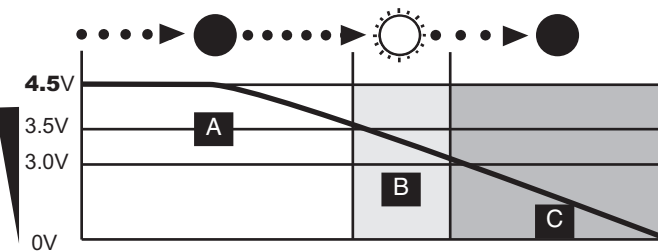

## Motion Sensitivity Adjustment

There are 8 different sensitivity levels. The 1st level is the most sensitive to small vibrations, and the 8th level is the least sensitive.

- 1) Turn on the alarm and push "off" button on the remote to clear.
- 2) Push both "On" & "Off" button together and hear the alarm twice.
- 3) Push "On" to move to different sensitivity settings (1-8).
- 4) When finished, push "Off" button to finalize. You will hear the alarm twice to confirm the setting.

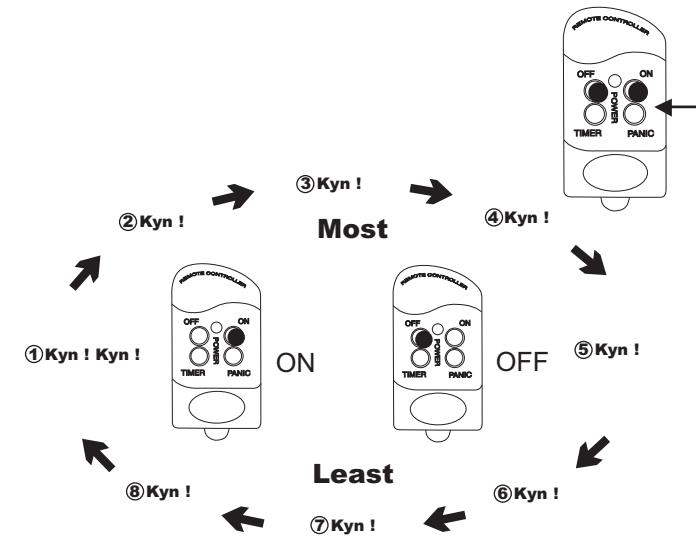


If your setting is not done within 5 seconds, you hear the alarm and the setting adjustment period is over. To set again go back to step (1).

## Length of Alarm

**There are 8 Different length settings:**

- 1) First turn on the alarm and push "Off" button (On the remote) to clear the functions.
- 2) Push both "On" & "Off" buttons and hear alarm twice.
- 3) Push "Timer" to select from length setting (1-8). Push "Off" to finalize. You will hear the alarm twice, to confirm that setting is completed.
- 4) To erase or change settings, push "Off" and start from step (1).

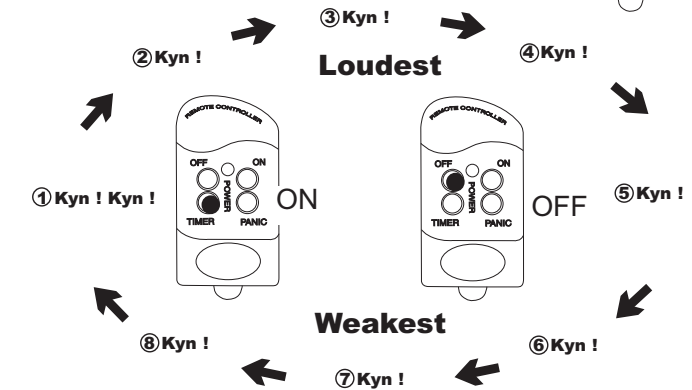

• Anti-Theft Motion Sensor Alarm is not automatically activated after setting the alarm length or the motion sensitivity.

## Trouble Shooting

The alarm is not activated when "On"	Check batteries • Turn off and change them
The alarm keeps ringing or there is no sound when "On"	Check batteries • Turn off and change them
Remote won't activate the alarm	(1) Check distance. Is it too far to activate? 30-50 yds is appropriate distance. Sometimes it'll depend on surroundings. • Get closer (2) Are there any aluminum stickers, keys or other metal items covering the remote? • These may interfere (3) Batteries? • Check LED lamp and change batteries in both devices.
The alarm won't sound	(1) Check sensitivity setting? • Adjust (2) Check batteries? • Turn off and change
After setting antitheft, vibration will not activate	Check batteries • change batteries
Alarm LED lamp won't work. Batteries drain quickly.	May not be the right battery • Use AAA 1.5V • Recommend to turning off the alarm when not in use.
• If alarm is used 8 hours / day for 2-4 weeks, we recommend fresh batteries. Change batteries at least once a month. Remove batteries when not in use for 2 weeks.	

## Warranty

### Money Back Satisfaction

If you are dissatisfied with this item in any way, you have 30 days from the date of delivery to return it, in an undamaged and condition, for a full refund, by pre-paid delivery to Aero Design & Manufacturing Company, 8 South 18th Avenue West, Duluth, MN 55806.

### Limited Guarantee

To the original purchaser, Aero Design & Manufacturing Company, Inc., the manufacturer and seller of Aerostich products, guarantees all Aerostich products against defects in materials and workmanship for two full years. Since no Aerostich product is indestructible, this guarantee does not cover: ordinary wear, soiling and aging, or damage due to contact with superheated components, misuse, or accidents. Repairs due to normal wear and tear, or the result of accidents, will be done at a reasonable charge.

### Exchanges, Refunds, and Repairs

Send items insured and prepaid; include invoice number and reason for return. Exchanges and returns must be in new condition. Items sent in for repairs must be clean. Customer is responsible for return shipping charges.

**AEROSTICH**

8 South 18th Ave West  
 Duluth, MN 55812  
 218-722-1927  
 www.aerostich.com



## Owner's manual

Thank you for purchasing Panic Alarm. Please read this manual carefully and save for future reference.

- Panic alarm requires 3 AAA batteries and the remote requires a single A23/12V battery. The remote battery may not last as long as the alarm battery since it's a transmitter battery.
- This device is an anti-theft alarm that senses vibration. Locate the alarm where nobody can see it and it is hard to remove.

## CAUTION

Please read this manual before use.

Do not operate remote while riding.

Do not use inside hospitals or other areas that might be affected by radio waves.

Do not modify.

Do not drop or hit, Alarm case is not impact resistant.  
•Will damage alarm.

Do not use old batteries.  
•Will damage alarm.

Do not leave in strong sun for a long time.(in vehicle)  
•Will damage alarm.


Do not allow to get wet.  
•Will damage alarm. Alarm is not waterproof.

Do not place alarm near ear.  
•120 db is loud enough to damage the inner ear.


Do not reverse (+) (-) Battery terminals.  
•Will damage batteries.  
•Will damage alarm.

## Use of Alarm

SIZE: Length 2 1/8" Width 3 7/8" Height 7/8" WEIGHT:

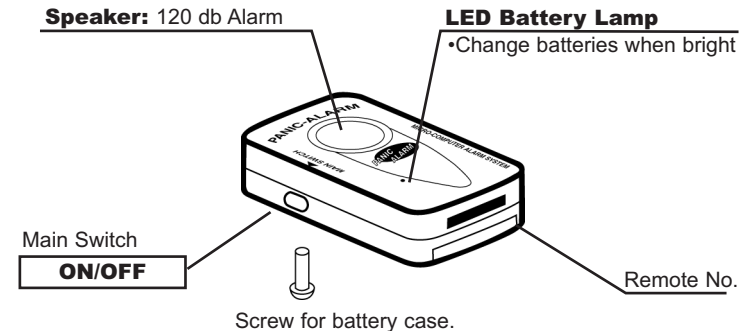


- When activated by motion, the alarm tone will continue even if you turn off the main switch until you also turn off the remote switch. After the alarm tone shuts off (or is stopped by the remote), then the alarm is ready to reset.
- Battery life is approximately 100 hrs.
- Alarm will ring for about 60 minutes total on fresh batteries.
- When batteries become very low (4.5-3.6V), alarm may not stop. When this happens replace with fresh batteries.
- Depending on use, battery life may be short, change batteries as soon as the LED lights.
- When not in use for 2 weeks remove batteries.
- This device is very sensitive to radio waves, so use only resistor type spark plugs.(Do not use racing plugs or V plugs.)
- Remote control range differs depending on weather and distance.

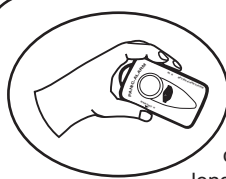

## Leave the Alarm .....


This device sounds a 120db alarm after sensing vibration. It can alarm once for 7 seconds or repeat alarm with an adjustable time length. Easy to leave inside a helmet, jacket, vehicle, bags, drawer, doors or other places where needed.

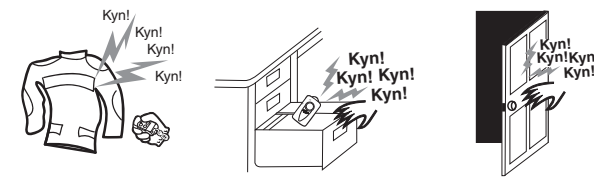

(Anti Theft mode) In a pocket to protect your jacket.

(Anti Theft mode) Alarm when a drawer is opened.

(Anti Theft mode) Alarm when a door is opened.

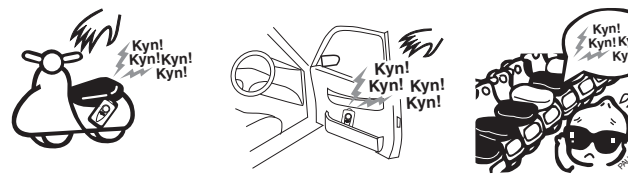


( Anti Theft mode) Alarm when bike is touched.

( Anti Theft mode) Alarm when a door is opened.

(Panic Mode) Find your bike, or other stuff easily.

## Remote Control Operation

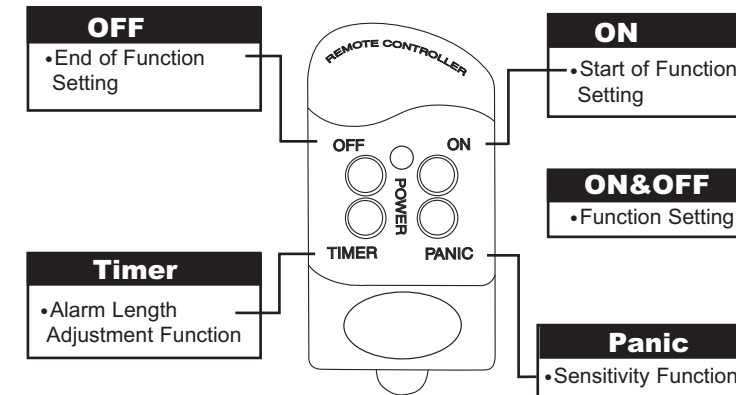


### All System functions are done by remote control.

- One A23/12V battery is required.
- Maximum remote control range is approximately 30-50 yd, may be shorter in buildings.
- Battery used in the remote may have a shorter life than the alarm battery.


### Caution

- Remote transmitter will not function if covered with metallic foil stickers or keys, or keyrings.

## Operation

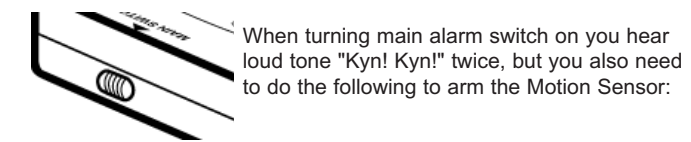

Push the remote "on" button to activate the Alarm Anti-Theft Motion Sensor. You will hear the alarm tone once. This indicates that the alarm is ready to function. Push the remote "off" button to cancel the Anti-Theft Motion Sensor setting.

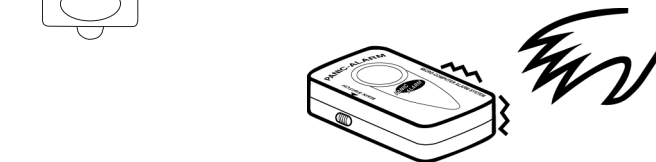


When the sensor feels vibration, the alarm sounds for 30 second default setting. After the alarm tone stops, the alarm is ready for the anti-theft setting again.

## Motion Sensitivity Adjustment Alarm Length Adjustment

All settings are done with the remote control.

Push both "on" "off" at the same time .When you hear alarm twice you are in Setting Mode.

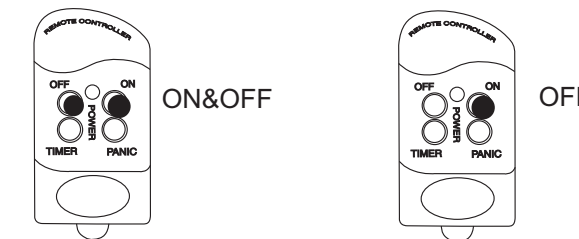

1. In Setting Mode, push "On" button to select the sensitivity level, and "off" button to finalize. You can select from 8 different settings.
2. In Setting Mode, push length of alarm "Timer" button to select and "Off" button to finalize. The alarm tone length ranges from 20-34 sec in 8 different settings.